


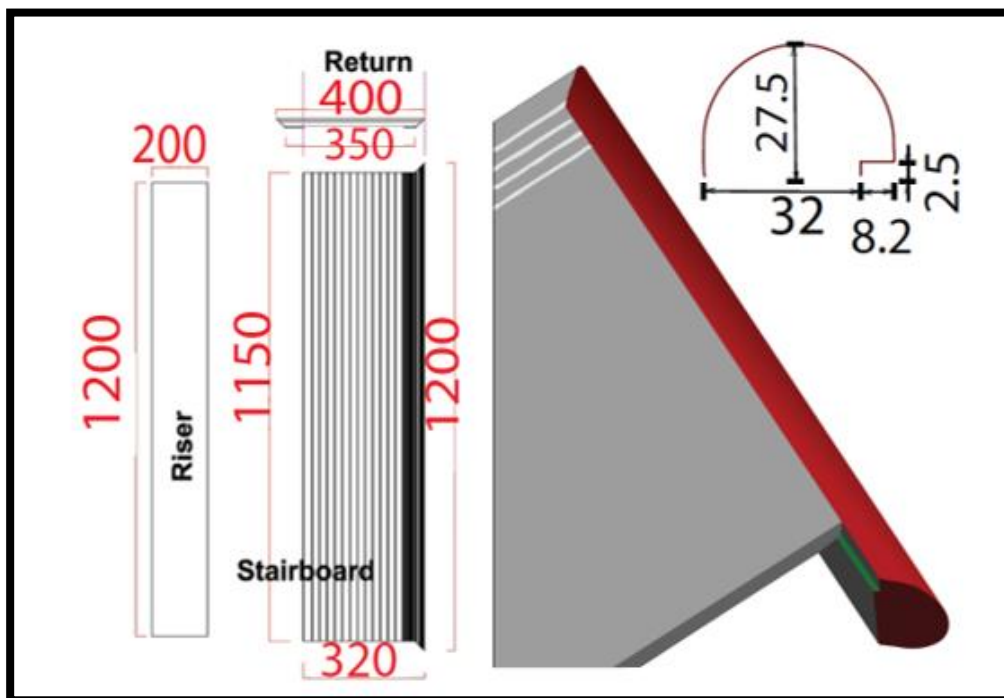

## Naf Aquaplus Steps & Risers Installation Guide

For more information about Naf Aquaplus Steps & Risers  
visit <https://floorsatwork.com/naf-aquaplus-steps-risers.html>

This guide shows the installation of Naf Aqua plus Steps & Risers. You can familiarize yourself with the general installation result and terms by examining the picture below.



This picture depicts a side view of a stair tread and riser. The Luxury Vinyl Tread (LVT) nose piece is installed and glued into place, and joined with a piece of standard stair planking that has been cut to cover the remainder of the tread. A riser cover can then be affixed to finish the step.

1. Measure the length and width of the stairs.



2. Measure the appropriate size for the Stair Tread and then cut it using a table saw/circular saw.



3. Install the Stair Tread using Pressure Sensitive Glue (Vinyl Glue), starting from the bottom of the original Stairs. Apply glue evenly to the back of the board and fix it to the wall.



4. Do the same one stair by another. Also, more than 24 hours of fixation is required.



5. Seal the edges with glue on the sides.



**Tips and best practice**

- Starting on the bottom step and working up is the best way to install Luxury Vinyl Treads in most cases.
- Mapei Ultrabond Eco 350 / Mapei Ultrabond Eco 360 or any pressure-sensitive equivalent are recommended adhesives.